1 Comp. Loc. Park Aid

1.1 Parking Aid System Component Overview

1 - Front Parking Aid Sensors (if applicable)

- Right Front Parking Aid Sensor -G252-
- Right Front Center Parking Aid Sensor -G253-
- Left Front Center Parking Aid Sensor -G254-
- Left Front Parking Aid Sensor -G255-

2 - Parking aid button -E266- (if applicable)

3 - Front Parking Aid Warning Buzzer -H22- (if applicable) ⇒ page 2

4 - Rear Parking Aid Warning Buzzer -H15-

- Located under the rear parcel shelf - Sedan ⇒ page 2
- Located in the luggage compartment rear left under side trim - Avant ⇒ page 3

5 - Rear Parking Aid Sensors

- Left Rear Parking Aid Sensor -G203-
- Left Rear Center Parking Aid Sensor -G204-
- Right Rear Center Parking Aid Sensor -G205-
- Right Rear Parking Aid Sensor -G206-
  - Located in the rear bumper

6 - Parking Aid Control Module -J446-

- Located in the left rear luggage compartment under side trim

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

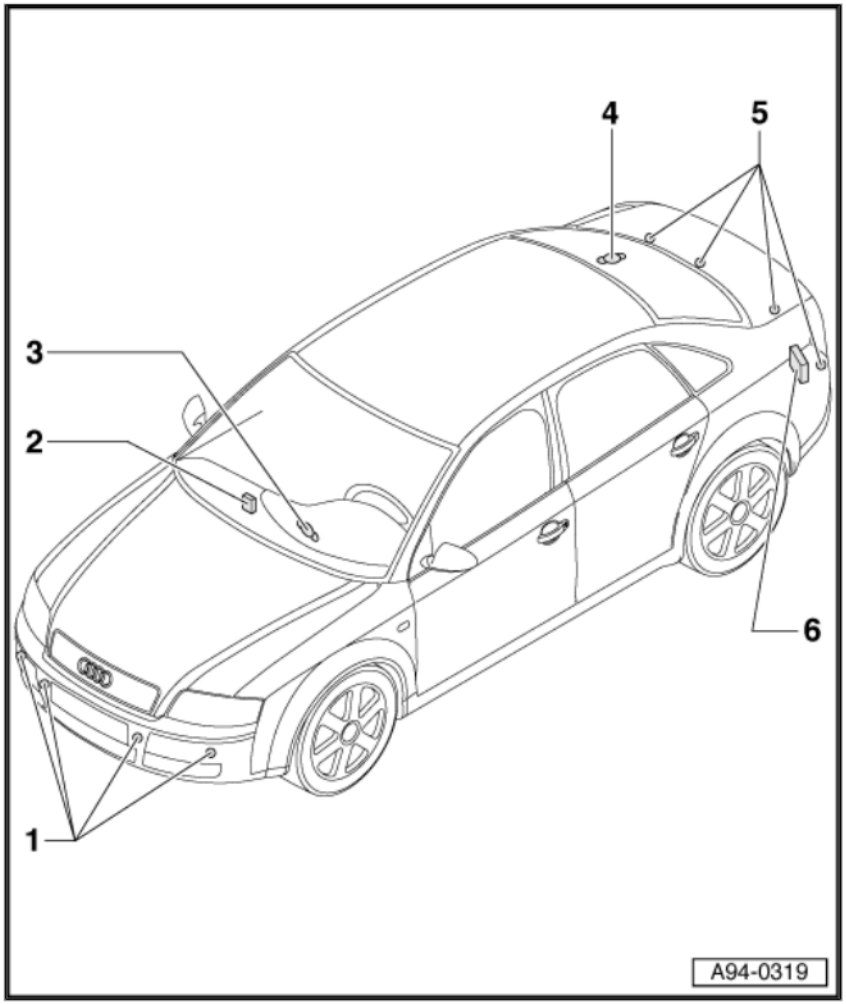

Front Parking Aid Warning Buzzer

Arrow - Front Parking Aid Warning Buzzer -H22-

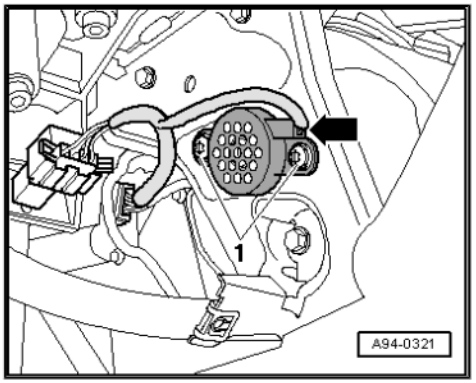

Rear Parking Aid Warning Buzzer - Sedan

Arrow - Rear Parking Aid Warning Buzzer -H15-

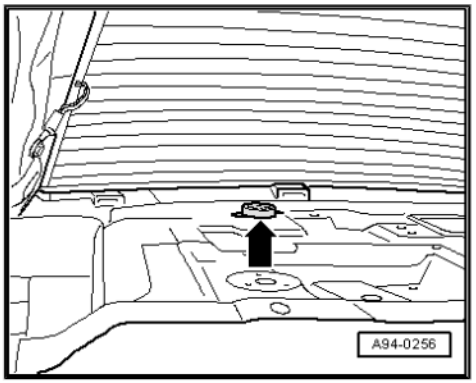

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Rear Parking Aid Warning Buzzer - Avant

Arrow - Rear Parking Aid Warning Buzzer -H15-

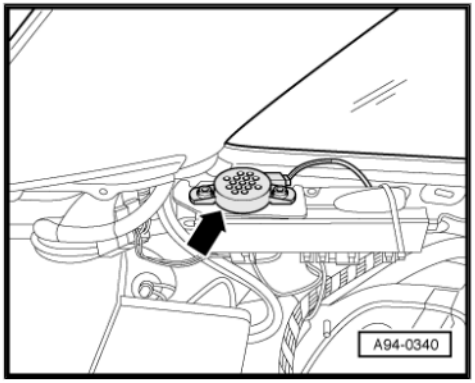

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.